INSTALLATION INSTRUCTIONS FOR M6 HOLOGRAMS

WARNING:
VERIFY THAT THE WEAPON IS CLEAR AND SAFE BEFORE PROCEEDING.
LASER RADIATION - AVOID DIRECT EXPOSURE TO BEAM

1) Verify that all components of the M6 Hologram Pack shown are present (M6 TLI not included).(**Figure 1**)

(Figure 1)

2) Select one Hologram (circle, triangle, crosshair) for use on the M6.

3) Hold the M6 with bezel facing up.

4) Remove bezel by turning counter clockwise.

(Figure 2)

5) Position large ring of Hologram around the bezel of the M6 with the small circular Hologram window over the laser port of the M6. (**Figure 2**)

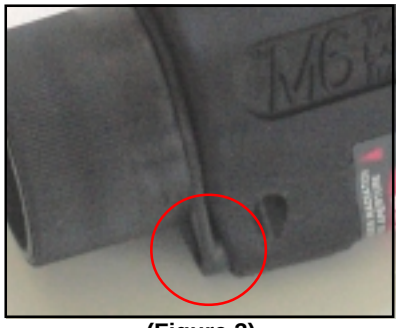

(Figure 3)

6) Slide down against the M6 body, making sure the Hologram window sits in the laser housing.(**Figure 3**)

7) Re-install the bezel by carefully turning clockwise.

When laser is activated, the beam will now transform into the selected Hologram shape.

8) To uninstall, remove bezel and lift Hologram away from M6. Replace bezel.

Cleaning: ONLY use Isopropyl (rubbing) alcohol on a Q-Tip to clean the Hologram window and housing.

3 Technology Dr., Londonderry, New Hampshire 03053
Phone (877) 744-4802 Fax (603) 647-7234
www.insightlights.com